

LITTLE RED RADIO

PASSWORD INFORMATION

The default password shipped along with the Little Red Radio is 88888888 (eight eights).

There are three places where the password is needed in the software, and two places where it can be set. The password is needed to read from the radio, write to the radio, and to change the frequency coverage. Passwords can be alpha, numeric, or alphanumeric if desired.

When reading from the radio, there is only an option to enter the current password which will allow the data to be downloaded to the software.

When writing to the radio, a window pops up with space for two passwords – the top space is for the current password used for reading and writing. The lower space is for changing the read/write password. If it is left blank, the password will remain the same. If an alphanumeric value is entered before writing, this will become the new password. Please use caution when entering a new password as there is no confirmation check of the change requested. Mistakes in entry will create a locked out radio. Since a blank entry is used to retain the existing password, the password cannot be empty or blank.

Changing the frequency limits (Setup -> Freq Limit) also requires a password. The software arrives with the default 88888888, and can be changed from the Freq Limit window. Clicking 'Change Password' opens a window that requests the old password, a new password, and a confirmation of the new password. In this case, alphanumeric entries are accepted as well as an empty value (no entry on either of the new and confirm spaces). The software may report 'Old Password Error' during the change, but will proceed with any changes entered and confirmed. If there is a difference between the new and confirm spaces, the software will report 'New Password Error' and the password will not change.

NOTE – If you do reset either of the passwords, please make a note of it somewhere as we are not aware of any means to reset them outside of the software.